

CJ-500/400

Unpacking and Repacking




CAUTION Unpacking, installation, and moving must be carried out by two or more persons. Failure to do so may result in falling of the unit, leading to injury.


* How to Unpack the CJ-500/400 *

The packings will be needed if you must repackage the product. Please do not throw them away.

1

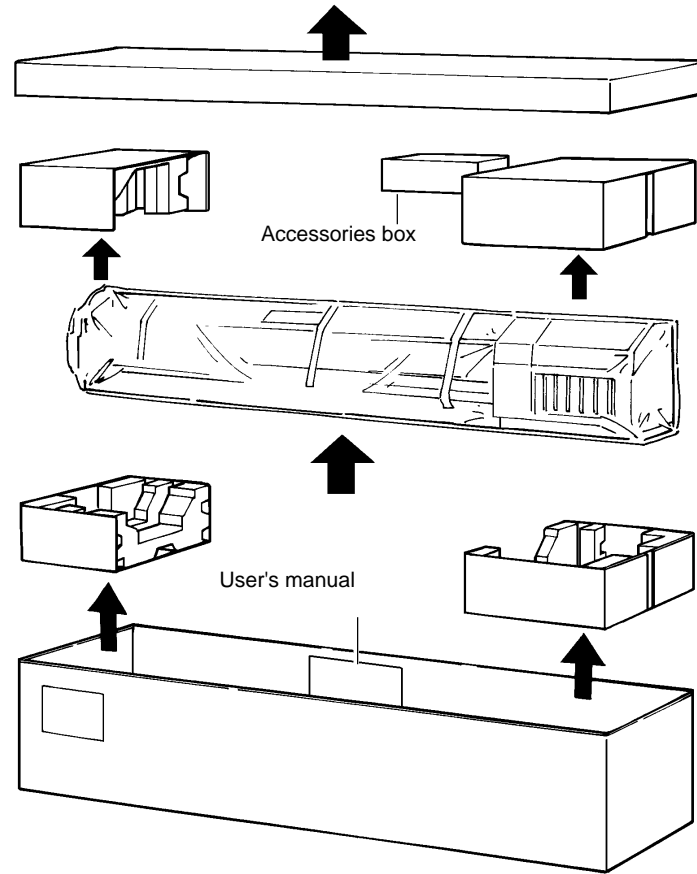


2

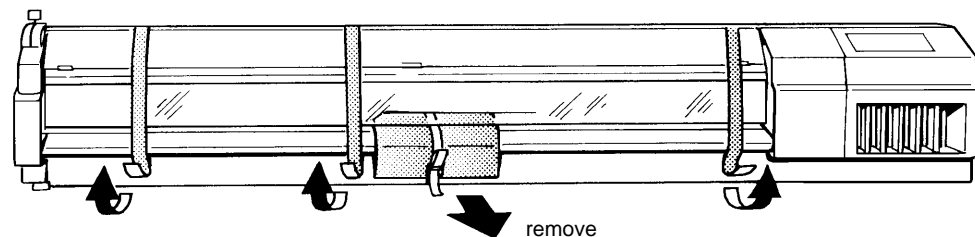


3


Peel off the tape holding the pads in place and detach them from the machine (five places).

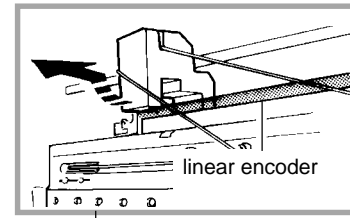


*Do not damage or touch the linear encoder.

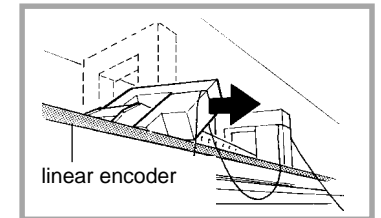

linear encoder

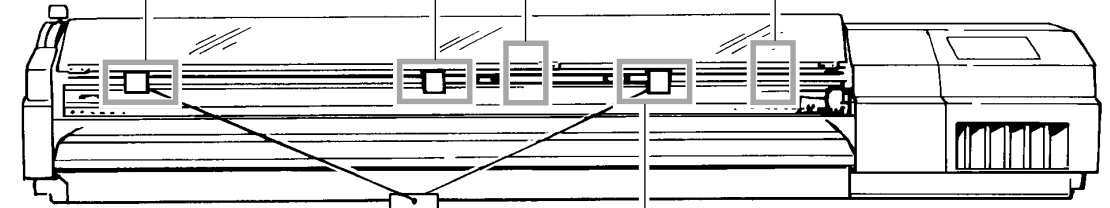


* The pads do not come loose even when the thread is pulled. This may lead to breakdown of the machine. Follow the explanations and remove one at a time.

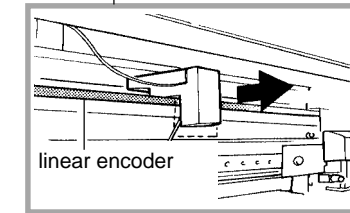


linear encoder

4

When repackaging, move the sheet loading lever toward the back of the unit.

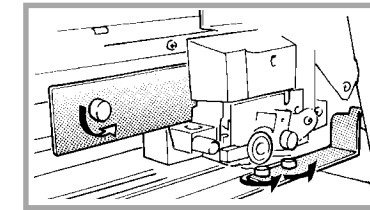


The clasps and screws will be needed if you must repackage the product. There are some screw holes where you can fix the clasps and screws for storage, at the bottom case.

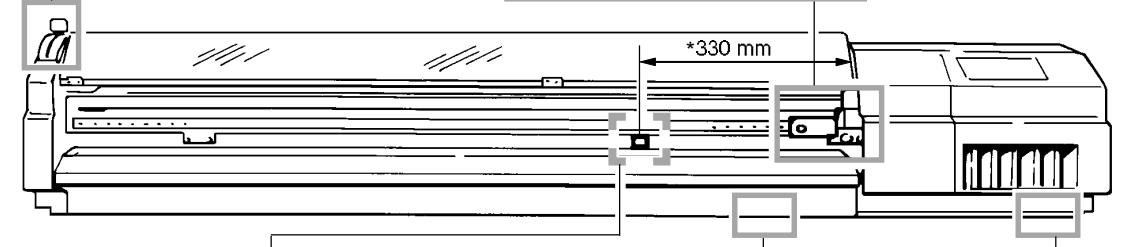

Rear


Pinch roller (middle)

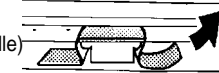


Also peel off the tape for holding them in place from the right and left pinch rollers on either side.

Bottom surface

Assemble on the stand before peeling off.

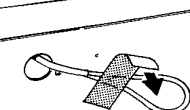

Bottom surface

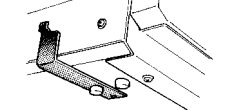

* When repacking, position the middle pinch roller at this location.

* How to Repack the CJ-500/400 *

Please be sure to remove ink as described in the section "When Moving the Unit...." in the CJ-500/400 user's manual. Then, repackage the machine in the reverse order of this procedure.