



Model: Roland MDX, JWJ
Subject: Installing SRP Player on multiple computers
Author: PG

The following document discusses how to install SRP Player on multiple computers without the milling machine being connected to the computer. SRP Player requires a driver be installed on a computer in order for it to function. Installing a “File” driver will give you the capability to install the software on a separate computer not attached to the machine.

1. Install yellow drivers CD into computer, select your machine and select to install driver.




2. When the below window appears, please select “FILE” under the port option.



3. Install SRP Player
4. Launch SRP Player software

Model: Roland MDX, JWX
Subject: Installing SRP Player on multiple computers
Author: PG

5. When the software looks for a machine attached to the computer, it will not find it. Select “Choose a supported cutting machine not on the list” and select the newly installed machine driver.

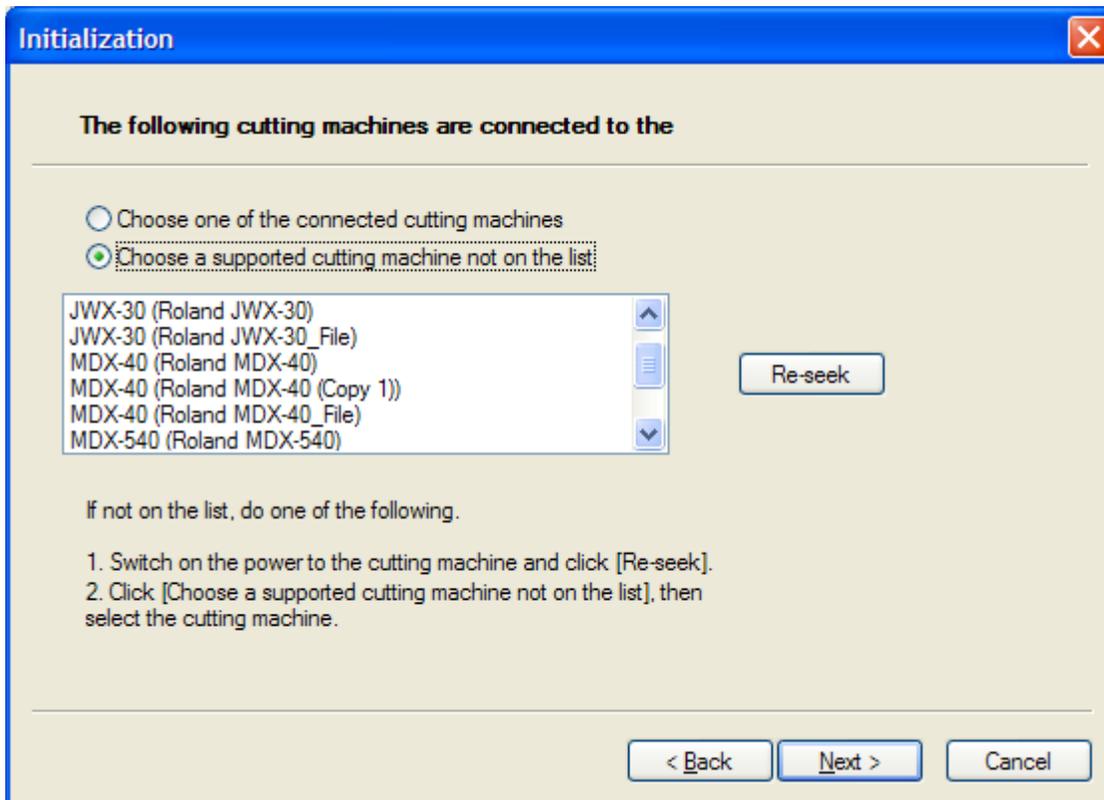

6. You can now create programs, create tool paths, and save the files for later use.