


LEJ-640FT – Print and Place Templates

Introduction

Print and place templates offer a great solution for **printing objects on the fly** that may require a jig when the job is either too small or the deadline too tight to have a proper jig produced.

Steps for Print and Place Templates.

- Set the machine to start at Origin 1.
- Set a bleed on the graphic if it is an edge to edge print and include tile spacing to minimize overspray.
- Print the job with however many copies are needed at High Speed (720x360) on vinyl.

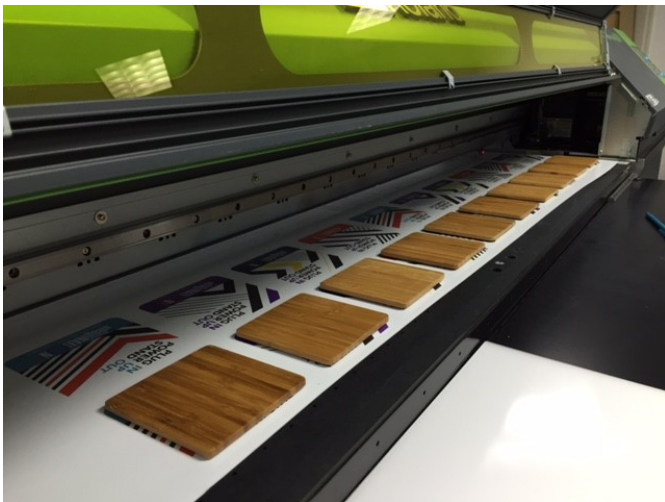

- Place tiles centered on the template.
- Return to origin then set the media height for the surface of the object.
- Change the color mode and quality to the desired settings and print the job.

Helpful Tips:

- Keep in mind that print and place jigs are slower to load and less accurate.
- If any file settings change or the vacuum turns off between prints, the template may shift.